



Figure 6-2. LCD Assembly Exploded Diagram

Table 6-2. LCD Assembly Exploded Diagram

No.	Description	Acer Part No.
1	Camera HF1315 (in LCD 18.4" FHD Glare assy.)	See LCD 18.4" FHD Glare assy.
2	Screw M2.0 x 3.0-I	86.S0207.001
3	Glass Hinge-L (in LCD 18.4" FHD Glare assy.)	See LCD 18.4" FHD Glare assy.
4	Screw M2.5 x 4.0-I	86.PWC07.001
5	LCD Bezel Tuba Sleeve Sub Assy. (in LCD 18.4" FHD Glare assy.)	See LCD 18.4" FHD Glare assy.
6	LED/B Assy. (in LCD 18.4" FHD Glare assy.)	See LCD 18.4" FHD Glare assy.
7	Screw M2.0 x 3.0-i	86.S0207.001
8	Glass Hinge-R (in LCD 18.4" FHD Glare assy.)	See LCD 18.4" FHD Glare assy.
9	LCD Cover Sub Assy. (in LCD 18.4" FHD Glare assy.)	See LCD 18.4" FHD Glare assy.
10	LCD 18.4" FHD Glare	6M.RCN07.004

Table 6-2. LCD Assembly Exploded Diagram

No.	Description	Acer Part No.
11	Glass 0.7-2	See LCD 18.4" FHD Glare assy.
12	LCD Non-bezel	See LCD 18.4" FHD Glare assy.
13	LCD Bezel Tuba Sleeve Sub Assy.	See LCD 18.4" FHD Glare assy.
14	Hinge Cap R	See LCD 18.4" FHD Glare assy.
15	Screw M2.5 x 5.0-l	Not available at time of printing
16	Cable Assy. (in LCD 18.4" FHD Glare assy.)	See LCD 18.4" FHD Glare assy.
17	Hinge Cap L	See LCD 18.4" FHD Glare assy.
18	Hinge Cap R	See LCD 18.4" FHD Glare assy.
19	Screw M2.5 x 6-l	86.A08V7.004